


## Snap-A-Saddle Pro Multi™

Adaptable Insulated Pipe Saddle

### Snap-A-Saddle Pro Multi™ Adapts To Your Needs!

Allows use on various sizes of strut, H-Beam, floor-mount, Clevis and steel angle mountings  
Adapts to different suspension systems, simply by swapping clipping adapters.

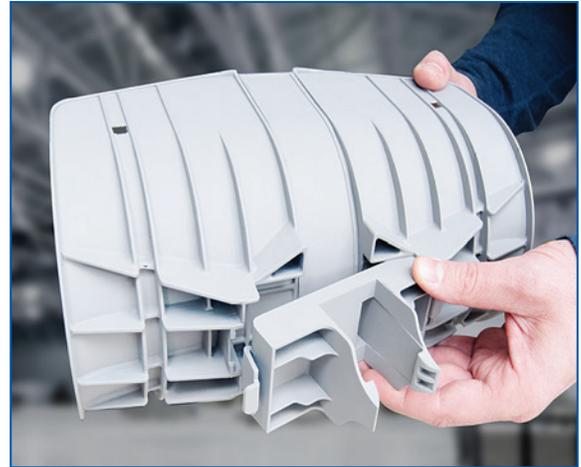

#### Breakthrough Innovation

Piping installations require different types of suspension systems, which vary in size. This new design adapts to various sizes of strut, H-Beam, floor-mount, clevis hangers, and steel angles. Thanks to the interchangeable bottom adapters, Snap-a-Saddle Pro Multi eliminates the hassle and headaches of compatibility problems you've been dealing with for so long!

#### Standardize Your Installation

Snap-a-Saddle Pro Multi™ makes the installer's job easier while standardizing piping installations and improving appearance. Whether you are looking at new or existing installations, the Snap-a-Saddle Pro Multi clip-on adapters will adapt to both the suspension system and the selected size of saddle core.

#### One Part Suits Multiple Uses

Simply change adapters

#### Fastest Installation In The Industry

40% Faster than metal or plastic shields

80% Faster than clamps and collars

#### Keeps Thermal Bridge Intact

Prevents insulation damage and compression

#### Tool-Free Installation

One simple click is all it takes

#### Maintains Pipe Insulation Properties

Permanent solution to displacement and/or falling of pipe support

#### Maintains Liquid Line In Place

Eliminates refrigerant leaks

| PROJECT INFORMATION:  |        | APPROVAL STAMP: |
|-----------------------|--------|-----------------|
| Project:              |        |                 |
| Date:                 | Phone: |                 |
| Architect / Engineer: |        |                 |
| Contractor:           |        |                 |
| Address:              |        |                 |
| Notes 1:              |        |                 |

Snap-A-Saddle-Pro-Multi

G08/24 - 67 **WARNING:** Cancer and Reproductive Harm Warning. For more information go to [www.P65Warnings.ca.gov](http://www.P65Warnings.ca.gov).


[www.ZSIINC.com](http://www.ZSIINC.com)



# Insulation Saddles

## Snap-A-Saddle Pro Multi™

Adaptable Insulated Pipe Saddle

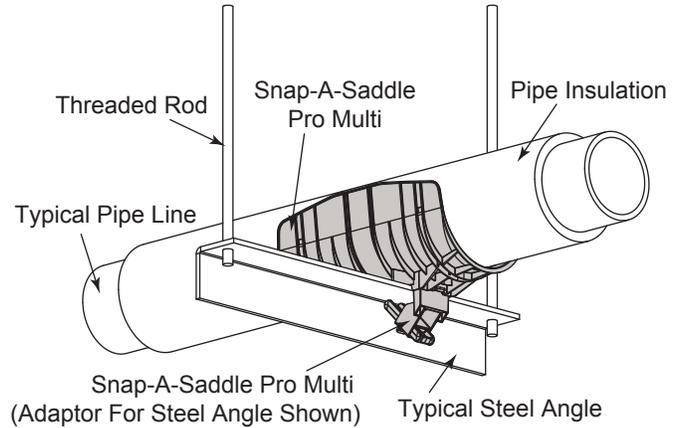

**Applications:**

Plumbing, Mechanical, Refrigeration, and Air Conditioning

**Installation:**


Tool-Free, suited for horizontal pipe installation.

**Certification:**

UL classified for USA (UL-723 (ASTM E 84)) and ULC listed for Canada (ULC-S102.2).

**Material:**

- Polypropylene 20% glass filled
- UV resistant
- Operating temperature -40° to 178°F (-40° to 81°C)
- Paintable (preserves mechanical properties even after painting)
- Non-adhesive surface for linear expansion of thermal insulation.

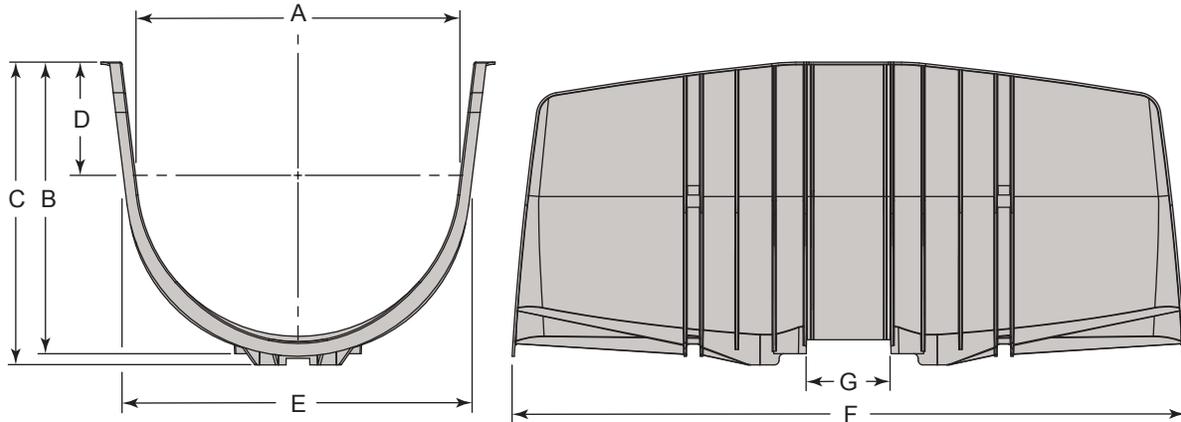

| Part No. Grey | A              | B             | C             | D            | E              | F - Length  | G            |
|---------------|----------------|---------------|---------------|--------------|----------------|-------------|--------------|
| SASM250G      | 2.34" (60mm)   | 1.92" (49mm)  | 2.33" (59mm)  | 0.40" (10mm) | 2.45" (62mm)   | 12" (305mm) | 1.20" (30mm) |
| SASM350G      | 3.45" (88mm)   | 3.17" (81mm)  | 3.58" (91mm)  | 1.09" (28mm) | 3.56" (90mm)   |             | 1.48" (38mm) |
| SASM450G      | 4.50" (114mm)  | 3.89" (99mm)  | 4.19" (106mm) | 1.17" (30mm) | 4.61" (117mm)  |             | 1.75" (44mm) |
| SASM550G      | 5.56" (140mm)  | 4.90" (124mm) | 5.20" (132mm) | 1.66" (42mm) | 5.75" (146mm)  |             | 1.78" (45mm) |
| SASM650G      | 6.46" (165mm)  | 5.96" (151mm) | 6.26" (159mm) | 2.18" (55mm) | 6.75" (171mm)  |             | 2.08" (53mm) |
| SASM850G      | 8.65" (219mm)  | 7.83" (199mm) | 8.13" (207mm) | 3.04" (77mm) | 8.75" (222mm)  | 18" (457mm) | 2.26" (57mm) |
| SASM1050G     | 10.65" (271mm) | 7.80" (198mm) | 8.10" (206mm) | 1.76" (45mm) | 10.59" (269mm) | 23" (584mm) |              |
| SASM1250G     | 12.65" (321mm) | 9.18" (233mm) | 9.48" (241mm) | 2.14" (54mm) | 12.52" (318mm) |             |              |

Snap-A-Saddle-Pro-Multi

**WARNING:** Cancer and Reproductive Harm Warning. For more information go to [www.P65Warnings.ca.gov](http://www.P65Warnings.ca.gov).





# Insulation Saddles


## Snap-A-Saddle Pro Multi™

Adaptable Insulated Pipe Saddle

### Strut Mount Adapter

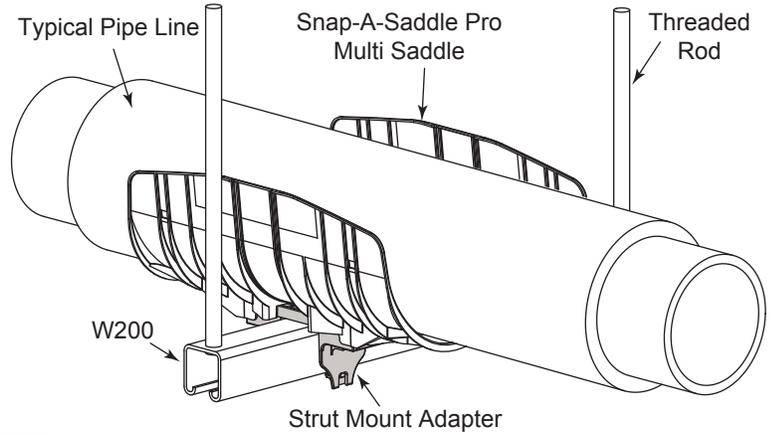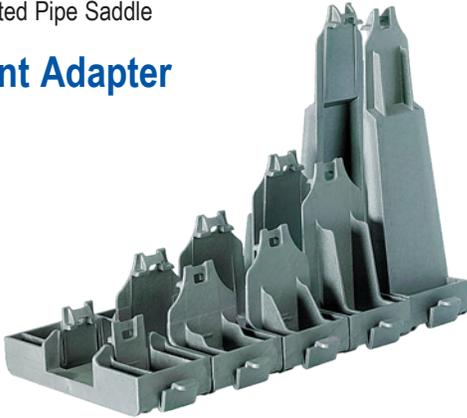



| Part No.    | A              | B               | Use with Channel Sizes                           |
|-------------|----------------|-----------------|--|
| SASM30X30G  | 1-3/16" (30mm) | 1-3/16" (30mm)  | -  |
| SASM31X43G  | 1-5/64" (31mm) | 1-11/16" (43mm) | -  |
| SASM40X38G  | 1-9/16" (40mm) | 1-1/2" (38mm)   | -  |
| SASM42X20G  | 1-5/8" (41mm)  | 13/16" (21mm)   | 1-5/8" x 13/16"                                  |
| SASM42X42G  |                | 1-5/8" (41mm)   | 1-5/8" x 1-5/8",<br>1-5/8" x 13/16" Back-to-Back |
| SASM42X84G  |                | 3-1/4" (165mm)  | 1-5/8" x 1-5/8" Back-to-Back,<br>1-5/8" x 3-1/4" |
| SASM42X166G |                | 6-1/2" (165mm)  | 1-5/8" x 3-1/4" Back-to-Back                     |
| SASM4D21G   | 2-1/8" (54mm)  | 1-1/16" (27mm)  | -  |
| SASM4D22G   |                | 2-1/8" (54mm)   | -  |

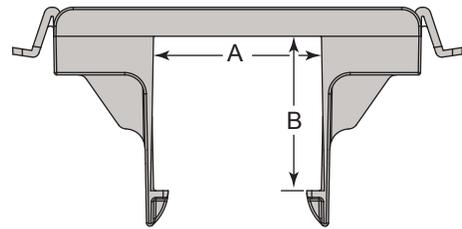

The use of the Stabilizer Adapter with 10" SASM1050G and 12" SASM1250G Saddles is suggested for additional support.

## SASMCLEVISG

Clevis Mount Adapter

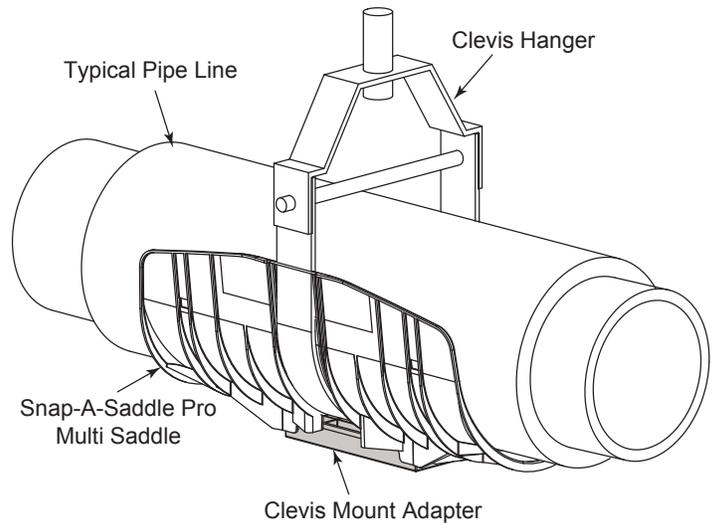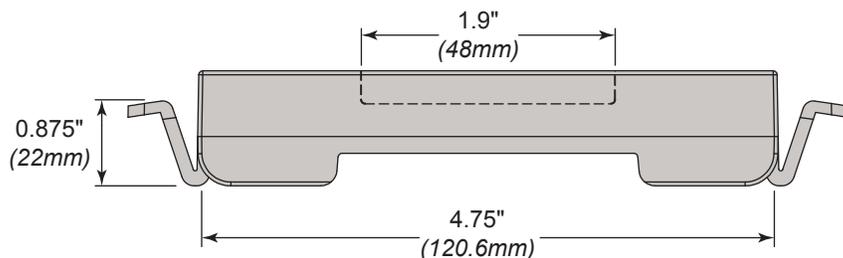

SnapShock™ can be attached to Clevis Mount Adapter.  
Stabilizer can be attached with Clevis Mount Adapter  
Clevis Mount Adapter is utilized with Floor Adapter assembly.



# Insulation Saddles

## Snap-A-Saddle Pro Multi™

Adaptable Insulated Pipe Saddle

### SASM2-5/8G




Steel Angle Mount Adapter

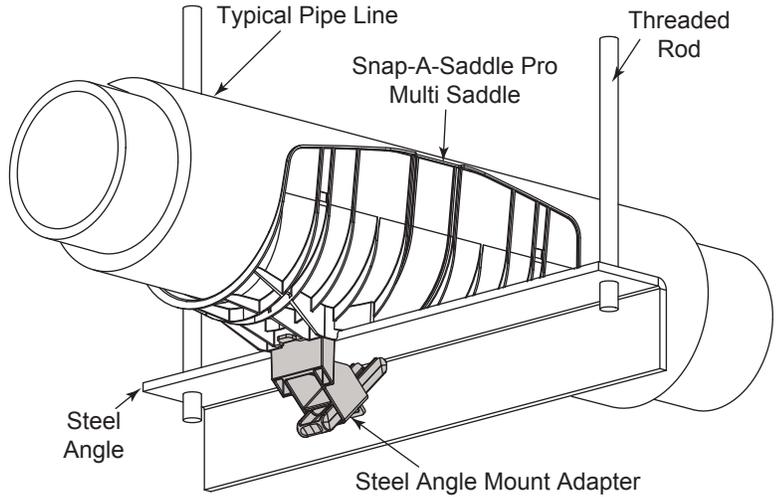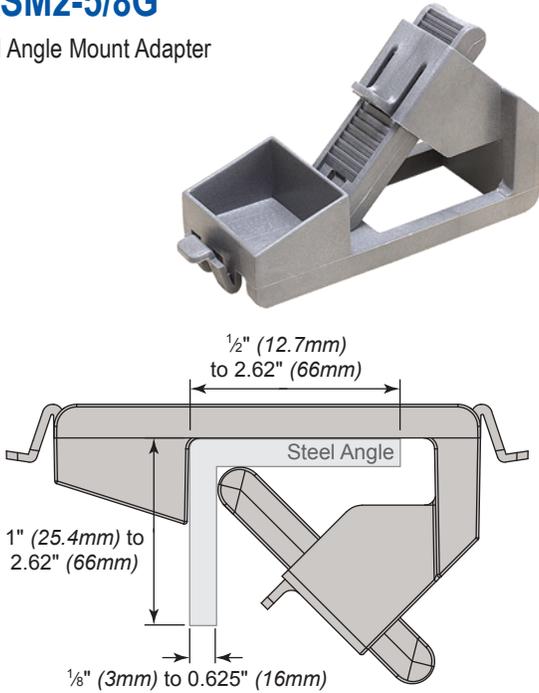

The use of the Stabilizer Adapter with 10" SASM1050G and 12" SASM1250G Saddles is suggested for additional support.

### SASMHBEAMG

H-Beam / I-Beam Adapter

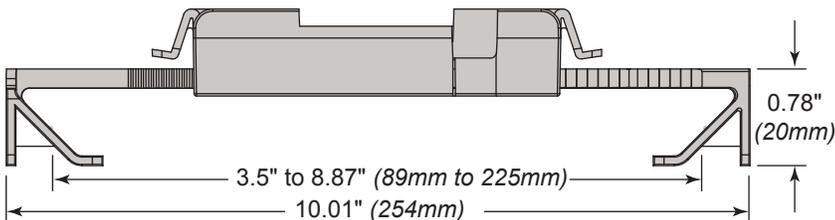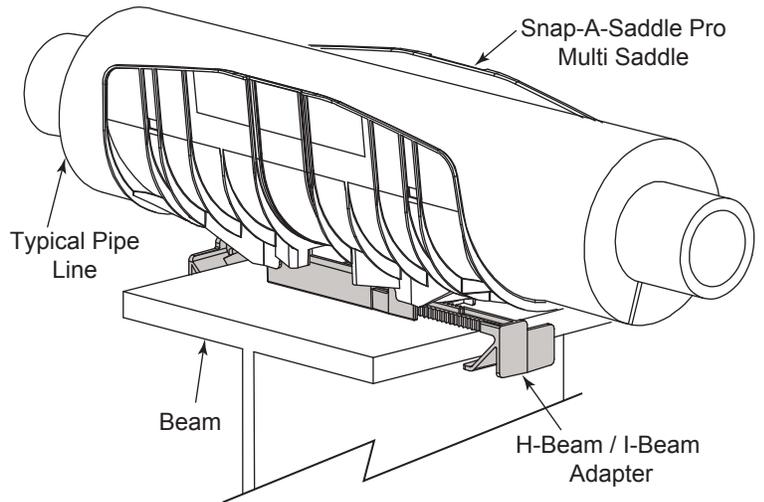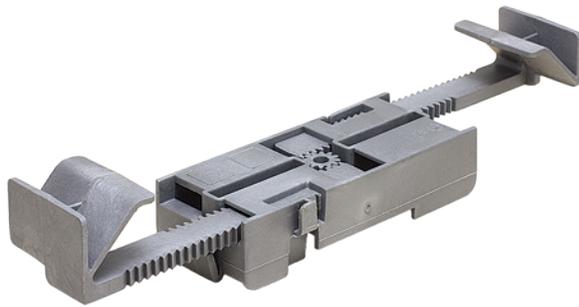


The use of the Stabilizer Adapter with 10" SASM1050G and 12" SASM1250G Saddles is suggested for additional support.

# Insulation Saddles


## Snap-A-Saddle Pro Multi™

Adaptable Insulated Pipe Saddle

### Stabilizer

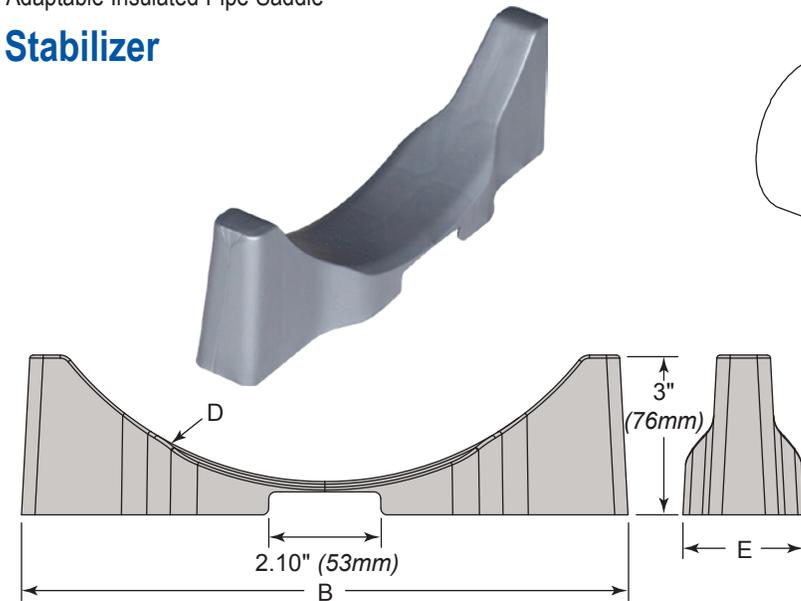



| Part Number   | B              | D     | E            | Compatible Only with Saddle |
|---------------|----------------|-------|--------------|-----------------------------|
| SASMSTAB1050G | 10.34" (263mm) | R5.13 | 2.24" (57mm) | SASM1050G                   |
| SASMSTAB1250G | 11.38" (289mm) | R6.13 | 2.28" (58mm) | SASM1250G                   |

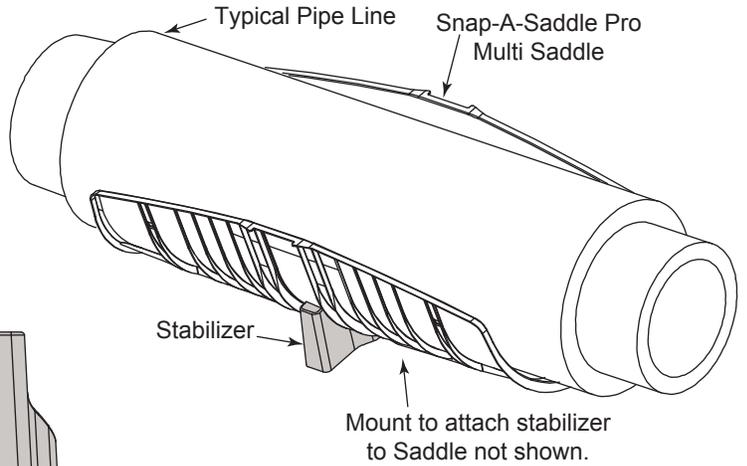

Stabilizer is attached to Saddle with Strut Mount, Steel Angle, H & I-Beam and Clevis Mount adapters.

The use of this Stabilizer Adapter with 10" SASM1050G and 12" SASM1250G Saddles is suggested for additional support.

### Floor Adapter

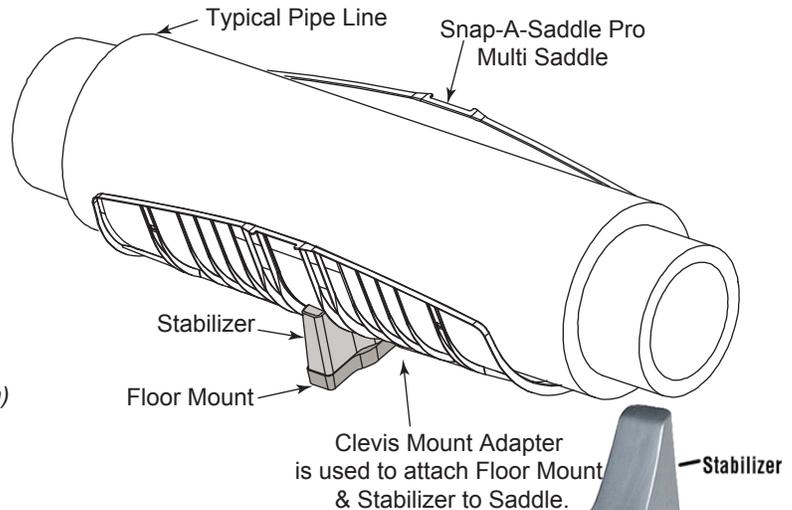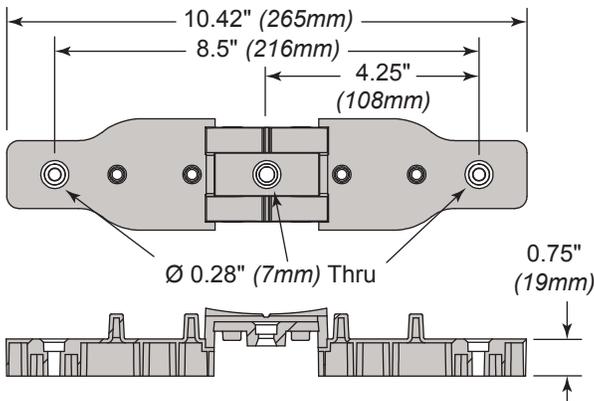

Floor Mount works with 10" SASM1050G and 12" SASM1250G Saddles. Requires the Stabilizer and Clevis Mount Adapters as shown in photo to the right.

| Part Number     | Compatible Only with Saddle | Requires a Stabilizer         | Requires a Clevis Mount |
|-----------------|-----------------------------|-------------------------------|-------------------------|
| SASMFLOOR10-12G | SASM1050G & SASM1250G       | SASMSTAB1050G & SASMSTAB1250G | SASMCLEVISG             |

